

ITEM: B493B -110 LYNDHURST 6"6"/6"0" K HEADBOARD B493B -128 LYNDHURST 6"6"/6"0" K STG FOOTBOARD & SLATS B493B -230 LYNDHURST 6"0" WK RAILS

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.

Caution: Please read the instructions thoroughly before assembly.


- 1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- 2. Please do not over tighten screws or bolts until the assembly is completed.
- 3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST

NO:	COMPONENT	SKETCH	Q'TY
A	HEADBOARD		1 PC
В	FOOTBOARD		1 PC
С	HEADBOARD LEFT SIDE FACING (LSF) LEG		1 PC
D	HEADBOARD RIGHT SIDE FACING (RSF) LEG		1 PC
Е	HEADBOARD RAIL		1 PC
F	SIDE RAIL		2 PCS
G	ROLL-OUT SLAT		1 SET
Н	SUPPORT LEG	♦=====	8 PCS
I	LEG FOOTBOARD LEFT		1 PC
J	LEG FOOTBOARD RIGHT		1 PC
K	FOOTBOARD SUPPORT LEG		2 PCS

HARDWARE LIST

NO:	COMPONENT	SKETCH	Q'TY	
1	ALLEN KEY		1 PC	
2	BOLT 5/16"*3-3/4"L		6 PCS	
3	BOLT 5/16"*1-1/2"L		2 PCS	
4	LOCK WASHER 5/16"		8 PCS	
5	FLAT WASHER PLATE 5/16"		8 PCS	
6	ALLEN KEY		1 PC	
7	BOLT 5/16"*1-3/4"L		2 PCS	
8	LOCK WASHER 5/16"		2 PCS	
9	FLAT WASHER PLATE 5/16"		2 PCS	
10	BOLT 1/4"*1-1/2"L		4 PCS	
11	LOCK WASHER 1/4"		4 PCS	
12	FLAT WASHER PLATE 1/4"		4 PCS	
13	SCREW 8*1"	ØDDDDDDDDDD	26 PCS	




MADE IN VIETNAM PAGE: 1 OF 5




ITEM: B493B -110 LYNDHURST 6"6"/6"0" K HEADBOARD
B493B -128 LYNDHURST 6"6"/6"0" K STG FOOTBOARD & SLATS
B493B -230 LYNDHURST 6"0" WK RAILS

STEP 1 Assemble Headboard LSF Leg (C) and Headboard RSF Leg (D) by using Allen Key (1) with hardware 2, 4, and 5. *DO NOT TIGHTEN THE BOLTS

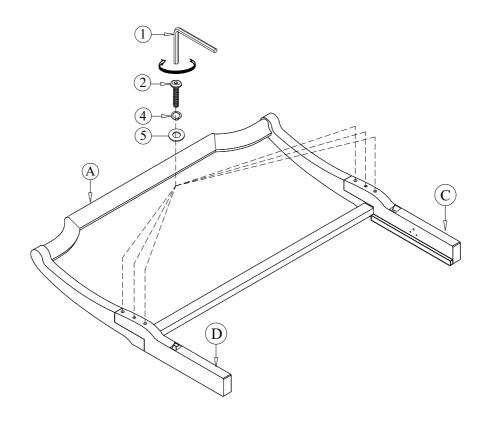

STEP 2 Assemble the headboard cross bar (E) to headboard legs (C & D) by using Allen Key (1) with hardware 3, 4, and 5. *TIGHTEN ALL THE BOLTS BY USING ALLEN KEY (1)

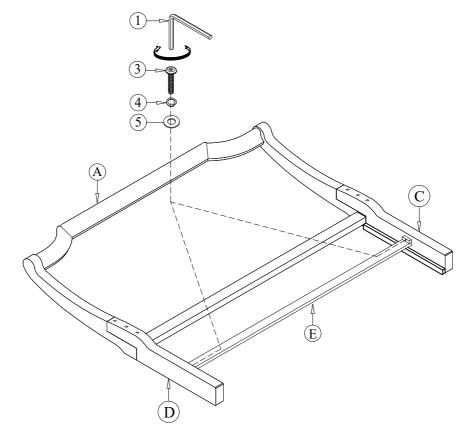


MADE IN VIETNAM PAGE: 2 OF 5




ITEM: B493B -110 LYNDHURST 6"6"/6"0" K HEADBOARD
B493B -128 LYNDHURST 6"6"/6"0" K STG FOOTBOARD & SLATS
B493B -230 LYNDHURST 6"0" WK RAILS

STEP 3 Assemble Footboard LF Leg (I) and Footboard RF Leg (J) by using Allen Key (6) with hardware 7, 8, and 9.

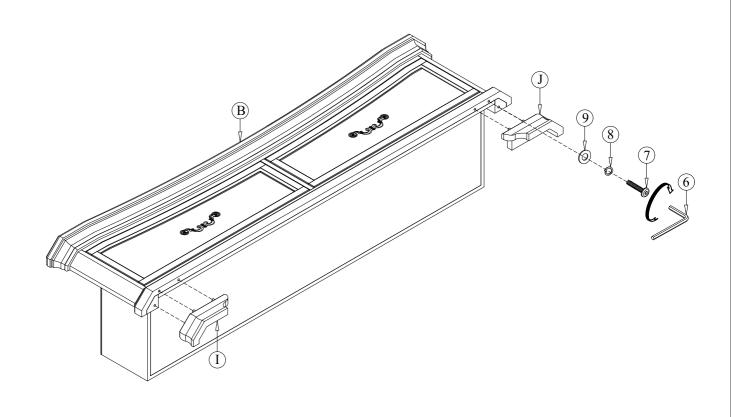


STEP 4 Assemble the footboard support leg (I)to storage footboard by using allen key (6) with hardware 10, 11, 12

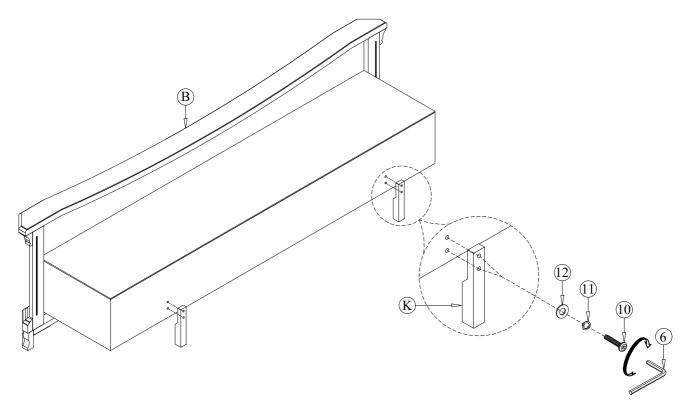




ITEM: B493B -110 LYNDHURST 6"6"/6"0" K HEADBOARD
B493B -128 LYNDHURST 6"6"/6"0" K STG FOOTBOARD & SLATS
B493B -230 LYNDHURST 6"0" WK RAILS

STEP 5 Assemble side rails (F) with Headboard (A) and Footboard (B)

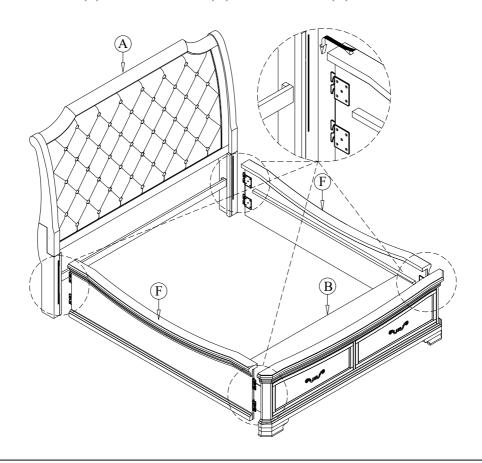

STEP 6 Install the support legs (H) on to the slat (G)

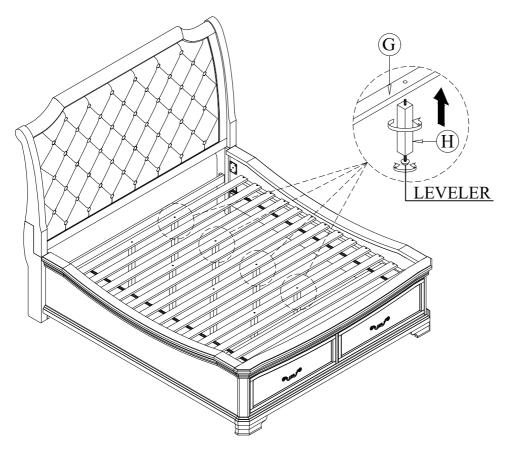


MADE IN VIETNAM

PAGE: 4 OF 5



ITEM: B493B -110 LYNDHURST 6"6"/6"0" K HEADBOARD
B493B -128 LYNDHURST 6"6"/6"0" K STG FOOTBOARD & SLATS
B493B -230 LYNDHURST 6"0" WK RAILS

STEP 7 Assemble the slat (G) to the side rails (F) by using a screwdriver with hardware 13.

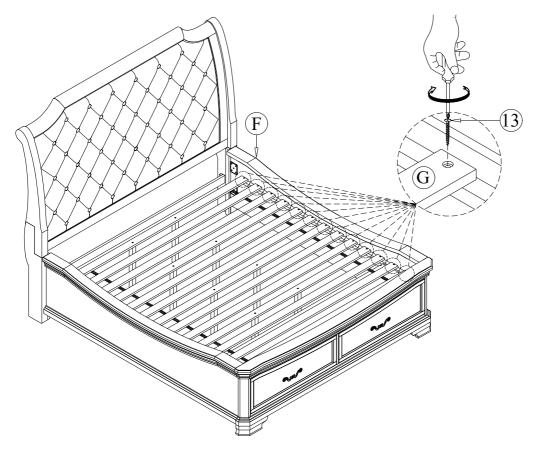



MADE IN VIETNAM

PAGE: 5 OF 5