

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.

CAUTION: Read the instructions carefully before assembly.


- 1. We recommend that you assemble this product with the assistance of another person to eliminate damage to the product during assembly.
- 2. When you want to reposition the product, please always "LIFT & MOVE".

PARTS LIST				HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	Q'TY (PCS)	NO.	DESCRIPTION	SKETCH	Q'TY (PCS)
A	SEAT FRAME		1	1	FLAT WASHER Ø5/16x3/4"	\bigcirc	12
в	LEFT SIDE FACING (LSF) ARM		1	2	WASHER Ø5/16x1/2"	Ð	12
с	RIGHT SIDE FACING (RSF) ARM		1	3	ALLEN KEY Ø5/16x3 ¹ / ₄ "		1
D	BACKREST		1	4	BOLT Ø5/16x3 <u>1</u> "	() ()	10
E	SEAT		2	5	THREAD BOLT Ø5/16x3	<i>CIUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUUU</i>	2
	CUSHION			6	HEX NUT Ø5/16x1/2"		2
F	LEG		2	7	WRENCH 1/2"x 3 ¹ / ₂ "	5	1
G	SUPPORT LEG		2	8	SCREWS D4x 2 ³ / ₄ "		4
0 1 2 3 4 5 6 7 8 9 10 Image: 100 and 100							




STEP 1:

Place the seat frame (A) upside down. Assemble the legs (F) to both left and right back side of the seat frame (A) by using the Allen Key (3) with hardware 1, 2, and 4.

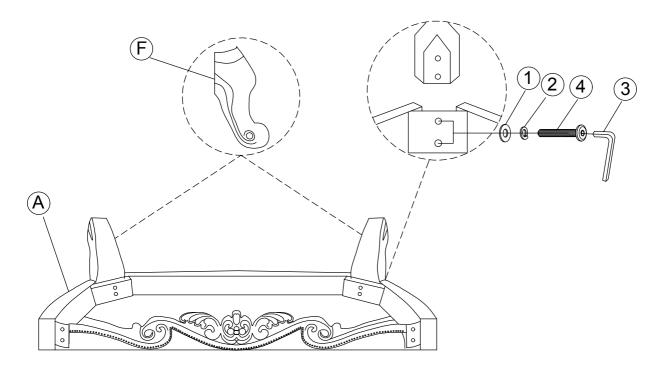

STEP 2:


Lay the seat frame (A) on its backside to reach the holes to secure the bolts for the arms. Align and assemble the LSF arm (B) and RSF arm (C) to the seat frame (A) by using the Allen Key (3) with hardware 1, 2, and 4.

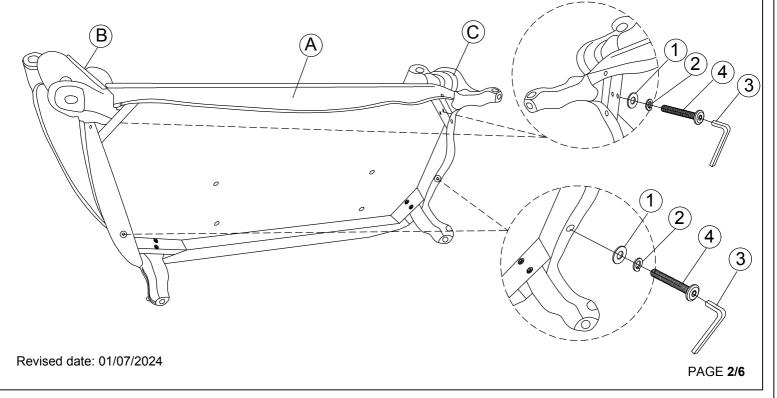




STEP 3:

Assemble and secure the front legs of the LSF arm (B) and RSF arm (C) to the seat frame (A) by using a screwdriver with hardware 8.

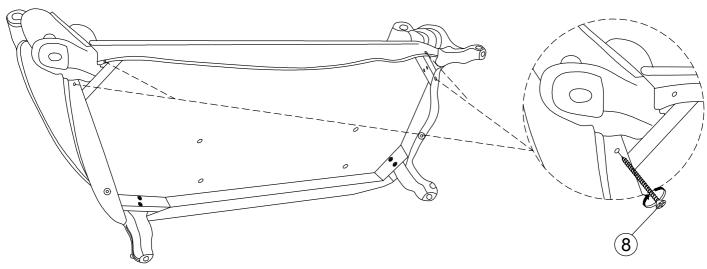

STEP 4:


Place the backrest (D) on its backside. Install the thread bolt (5) into the hole on the bottom of the backrest (D) by using your hands to rotate the bolt about 1/2 inches (25 mm) into the backrest (D).

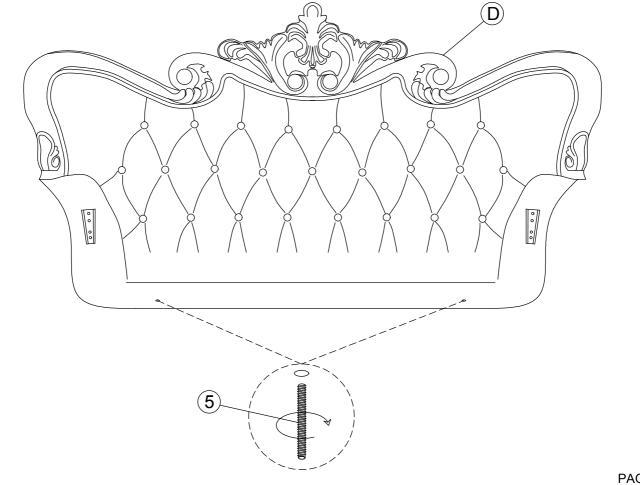




STEP 5:

Place the frame up right to install the backrest (D) with the LSF arm (B) and RSF arm (C) by align and slide the metal bracket on the backrest (D) to the metal brackets on the arms. Please make sure brackets are inserted all the way and secured.

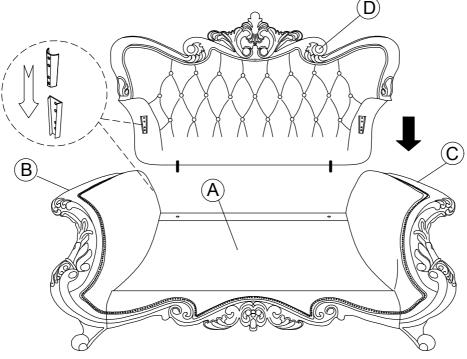

STEP 6:


Lay the upholstery on its back on a clean and soft surface to reach the thread bolt (5). Secure the backrest (D) to the seat frame (A) by using the Wrench (7) with hardware 1,2, and 6

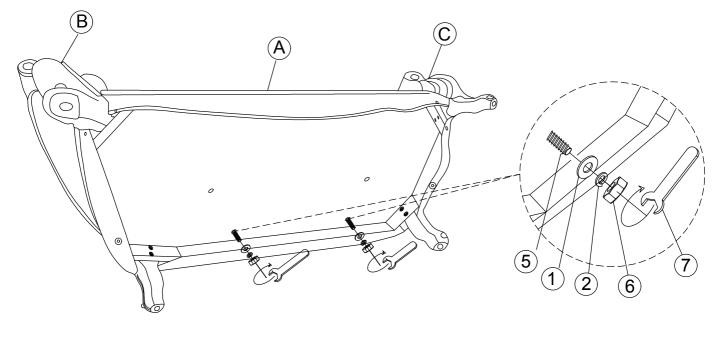




STEP 7:

Screw the support legs (G) to the bottom of seat frame (A).

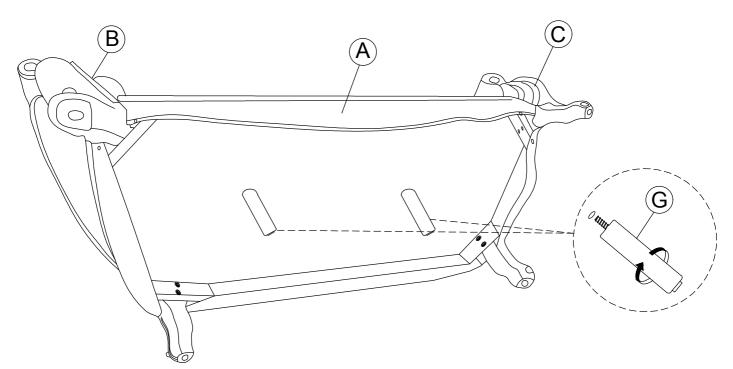

STEP 8:

Place the upholstery up right and install the seat cushion (E) to the seat frame (A).

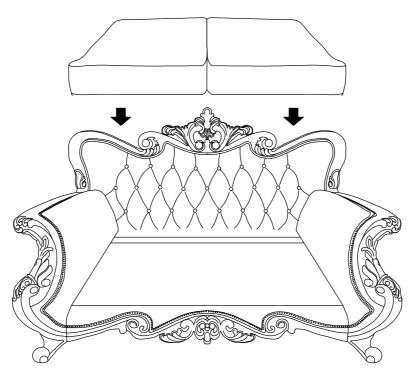



FINISH

